 


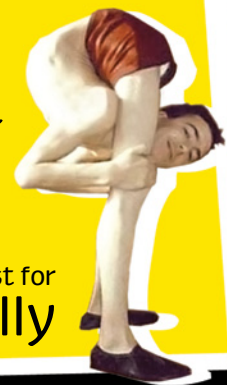

# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

 


	Brand	Model	45	65	95	110
1	Acer	CE-5430			x	
2	Acer	CE-5330			x	
3	Acer	CI-6330			x	
4	Acer	CE-6430			x	
5	Acer	CS-5531		x		
6	Acer	CI-8330			x	
7	Acer	CS-6530		x		
8	Acer	CS-6531		x		
9	Acer	CR-8530			x	
10	Acer	CU-6530			x	
11	Acer	CP-8531			x	
12	Acer	CP-8660			x	
13	Canon	Digital IXUS 40	x			
14	Canon	Digital IXUS 50	x			
15	Canon	Digital IXUS 55	x			
16	Canon	Digital IXUS 60	x			
17	Canon	Digital IXUS 65			x	
18	Canon	Digital IXUS 700			x	
19	Canon	Digital IXUS 750			x	
20	Canon	Digital IXUS 800 IS			x	
21	Canon	Digital IXUS I zoom			x	
22	Canon	Digital IXUS wireless				x
23	Canon	IXUS 850 IS			x	
24	Canon	IXUS 900 TI			x	
25	Canon	IXUS i7			x	
26	Canon	Powershot A85				x
27	Canon	Powershot S500		x		
28	Canon	Powershot SD30			x	
29	Canon	Powershot SD400	x			
30	Canon	Powershot SD450	x			
31	Canon	Powershot SD500			x	
32	Canon	Powershot SD550			x	
33	Canon	Powershot SD600	x			
34	Canon	Powershot SD630			x	
35	Canon	Powershot SD700			x	
36	Canon	SD430 wireless				x
37	Canon	Powershot SD750			x	
38	Canon	Powershot SD1000	x			
39	Canon	Powershot TX1			x	



# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

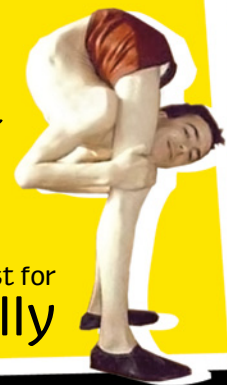 


	Brand	Model	45	65	95	110
40	Canon	IXUS 70 IS	x			
41	Canon	IXUS 75 IS			x	
42	Canon	IXUS 860 IS			x	
43	Canon	IXUS 950 IS			x	
44	Canon	IXUS 960 IS			x	
45	Casio	Exilim card EX-S600			x	
46	Casio	Exilim card EX-S600D			x	
47	Casio	Exilim card EX-S770			x	
48	Casio	Exilim EX-S500			x	
49	Casio	Exilim EX-Z10			x	
50	Casio	Exilim EX-Z1000			x	
51	Casio	Exilim EX-Z120			x	
52	Casio	Exilim EX-Z40		x		
53	Casio	Exilim EX-Z5			x	
54	Casio	Exilim EX-Z500		x		
55	Casio	Exilim EX-Z500BK		x		
56	Casio	Exilim EX-Z57			x	
57	Casio	Exilim EX-Z60			x	
58	Casio	Exilim EX-Z600		x		
59	Casio	Exilim EX-Z70			x	
60	Casio	Exilim EX-Z700		x		
61	Casio	Exilim EX-Z750			x	
62	Casio	Exilim EX-Z850			x	
63	Casio	QV-R41			x	
64	Casio	QV-R51			x	
65	Casio	QV-R61			x	
66	Casio	Exilim EX-Z110			x	
67	Casio	QV-R62			x	
68	Casio	QV-R4			x	
69	Casio	Exilim EX-V7			x	
70	Casio	Exilim EX-S770D			x	
71	Casio	Exilim EX-Z75			x	
72	Casio	Exilim EX-Z1050			x	
73	Fujifilm	A700			x	
74	Fujifilm	Finepix A340				x
75	Fujifilm	Finepix A350			x	
76	Fujifilm	Finepix A400			x	
77	Fujifilm	Finepix A500			x	
78	Fujifilm	Finepix A510			x	



# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

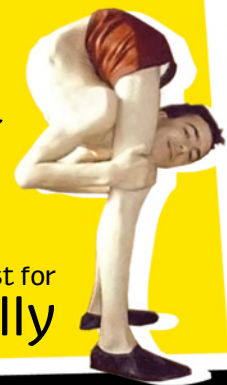 


	Brand	Model	45	65	95	110
79	Fujifilm	Finepix A600			x	
80	Fujifilm	Finepix E500				x
81	Fujifilm	Finepix E510				x
82	Fujifilm	Finepix E900				x
83	Fujifilm	Finepix F10			x	
84	Fujifilm	Finepix F11			x	
85	Fujifilm	Finepix F20			x	
86	Fujifilm	Finepix F30			x	
87	Fujifilm	Finepix F31 FD			x	
88	Fujifilm	Finepix F440			x	
89	Fujifilm	Finepix F450 zoom			x	
90	Fujifilm	Finepix F455			x	
91	Fujifilm	Finepix F460			x	
92	Fujifilm	Finepix F470			x	
93	Fujifilm	Finepix F650				x
94	Fujifilm	Finepix F810				x
95	Fujifilm	Finepix V10			x	
96	Fujifilm	Finepix Z1			x	
97	Fujifilm	Finepix Z2 zoom			x	
98	Fujifilm	Finepix A610				x
99	Fujifilm	Finepix A800				x
100	Fujifilm	Finepix F40fd			x	
101	Fujifilm	Finepix Z5fd			x	
102	Fujifilm	Finepix Z3			x	
103	Fujifilm	Finepix Z10fd			x	
104	Fujifilm	Finepix Z100fd			x	
105	Fujifilm	Finepix F50fd			x	
106	Fujifilm	Finepix F480			x	
107	Fujifilm	Finepix A700			x	
108	Fujifilm	Finepix A820				x
109	Fujifilm	Finepix A900				x
110	Fujifilm	Finepix A920				x
111	HP	Photosmart E317				x
112	HP	Photosmart E327				x
113	HP	Photosmart M22			x	
114	HP	Photosmart M23			x	
115	HP	Photosmart M425			x	
116	HP	Photosmart M525				x
117	HP	Photosmart M527				x



# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

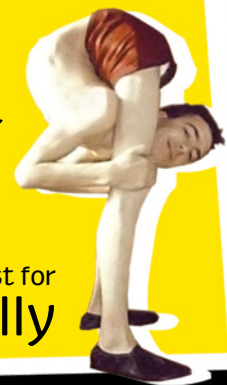 


	Brand	Model	45	65	95	110
118	HP	Photosmart R507		x		
119	HP	Photosmart R607		x		
120	HP	Photosmart R707				x
121	HP	Photosmart R717			x	
122	HP	Photosmart R725			x	
123	HP	Photosmart R727			x	
124	HP	Photosmart R817			x	
125	HP	Photosmart R818			x	
126	HP	Photosmart R827			x	
127	HP	Photosmart R927			x	
128	HP	Photosmart R967			x	
129	HP	Photosmart R627			x	
130	HP	Photosmart E427			x	
131	HP	Photosmart M627			x	
132	HP	Photosmart M437				x
133	HP	Photosmart M537				x
134	HP	Photosmart R837				x
135	HP	Photosmart R742			x	
136	HP	Photosmart R847				x
137	HP	Photosmart E337				x
138	HP	Photosmart Mz67				x
139	HP	Photosmart M547			x	
140	HP	Photosmart M637			x	
141	HP	Photosmart M737			x	
142	Kodak	Easyshare C330				x
143	Kodak	Easyshare C340				x
144	Kodak	Easyshare C530			x	
145	Kodak	Easyshare C533				x
146	Kodak	Easyshare C643				x
147	Kodak	Easyshare C663			x	
148	Kodak	Easyshare C743				x
149	Kodak	Easyshare LS 753				x
150	Kodak	Easyshare LS755			x	
151	Kodak	Easyshare V530			x	
152	Kodak	Easyshare V550			x	
153	Kodak	Easyshare V570				x
154	Kodak	Easyshare V603			x	
155	Kodak	Easyshare V610				x
156	Kodak	Easyshare V705				x



# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

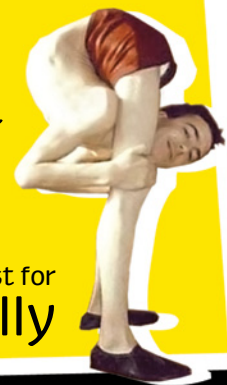

 
	Brand	Model	45	65	95	110
157	Kodak	Easysshare-one				x
158	Kodak	Easysshare V803				x
159	Kodak	Easysshare V1003				x
160	Kodak	Easysshare C653			x	
161	Kodak	Easysshare C613				x
162	Kodak	Easysshare C763			x	
163	Kodak	Easysshare M753			x	
164	Kodak	Easysshare M853			x	
165	Kodak	Easysshare M873			x	
166	Kodak	Easysshare M883			x	
167	Kodak	Easysshare Z885				x
168	Kodak	Easysshare Z1275				x
169	Kodak	Easysshare Z1233				x
170	Kodak	Easysshare Z1253				x
171	Konica	Dimage F300				x
172	Konica	Dimage G500			x	
173	Konica	Dimage G600			x	
174	Konica	Dimage KD500			x	
175	Konica	Dimage KD510			x	
176	Konica	Minolta Dimage E500			x	
177	Konica	Minolta Dimage X50			x	
178	Konica	Minolta Dimage X60	x			
179	Konica	Digimage G530			x	
180	Leica	C-Lux1			x	
181	Leica	D-Lux3				x
182	Leica	C-Lux2			x	
183	Nikon	Coolpix 4600			x	
184	Nikon	Coolpix 5600			x	
185	Nikon	Coolpix L2			x	
186	Nikon	Coolpix L3			x	
187	Nikon	Coolpix L4			x	
188	Nikon	Coolpix L6			x	
189	Nikon	Coolpix P3			x	
190	Nikon	Coolpix P4			x	
191	Nikon	Coolpix S1			x	
192	Nikon	Coolpix S2			x	
193	Nikon	Coolpix S3			x	
194	Nikon	Coolpix S5			x	
195	Nikon	Coolpix S6				x



Crumpler

# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

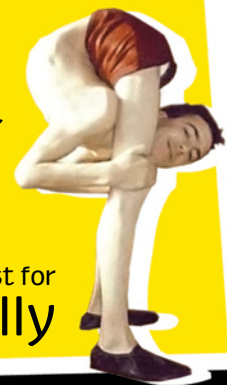

 
	Brand	Model	45	65	95	110
196	Nikon	Coolpix S7c				x
197	Nikon	Coolpix S9			x	
198	Nikon	Coolpix L12			x	
199	Nikon	Coolpix L10			x	
200	Nikon	Coolpix L11			x	
201	Nikon	Coolpix S500		x		
202	Nikon	Coolpix S200			x	
203	Nikon	Coolpix S50			x	
204	Nikon	Coolpix S50c				x
205	Nikon	Coolpix S51			x	
206	Nikon	Coolpix S51c				x
207	Nikon	Coolpix S510		x		
208	Nikon	Coolpix S700		x		
209	Nikon	L14			x	
210	Nikon	L15			x	
211	Olympus	AZ-2 zoom				x
212	Olympus	C170				x
213	Olympus	Camedia C180				x
214	Olympus	FE-120				x
215	Olympus	FE-130			x	
216	Olympus	FE-150			x	
217	Olympus	FE-160			x	
218	Olympus	FE-170			x	
219	Olympus	FE-180			x	
220	Olympus	FE-190			x	
221	Olympus	FE-200				x
222	Olympus	mju digital 1000				x
223	Olympus	mju Digital 400				x
224	Olympus	mju Digital 410				x
225	Olympus	mju Digital 500				x
226	Olympus	mju Digital 600				x
227	Olympus	mju digital 700			x	
228	Olympus	mju digital 710SW			x	
229	Olympus	mju digital 720SW			x	
230	Olympus	mju digital 725SW			x	
231	Olympus	mju digital 730			x	
232	Olympus	mju digital 740			x	
233	Olympus	mju digital 750			x	
234	Olympus	mju digital 800				x



Crumpler

# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

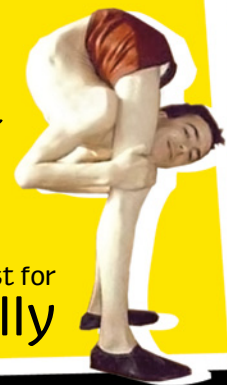

 
	Brand	Model	45	65	95	110
235	Olympus	mju digital 810				x
236	Olympus	mju Mini Digital			x	
237	Olympus	mju Mini Digital S			x	
238	Olympus	Olympus FE-140			x	
239	Olympus	Olympus IR 300				x
240	Olympus	SP 310				x
241	Olympus	SP 320				x
242	Olympus	SP 350				x
243	Olympus	SP 700				x
244	Olympus	FE-210			x	
245	Olympus	FE-230			x	
246	Olympus	FE-240			x	
247	Olympus	FE-250			x	
248	Olympus	mju digital 770SW			x	
249	Olympus	Stylus 760				x
250	Olympus	Stylus 780				x
251	Olympus	FE-270			x	
252	Olympus	FE-280			x	
253	Olympus	FE-290				x
254	Olympus	FE-300			x	
255	Olympus	Stylus 790 SW			x	
256	Olympus	Stylus 820			x	
257	Olympus	Stylus 830				x
258	Olympus	Stylus 1200				x
259	Panasonic	DMC-FX01			x	
260	Panasonic	DMC-FX01K			x	
261	Panasonic	DMC-FX01P			x	
262	Panasonic	DMC-FX01S			x	
263	Panasonic	DMC-FX01W			x	
264	Panasonic	DMC-FX07			x	
265	Panasonic	DMC-FX2			x	
266	Panasonic	DMC-FX3			x	
267	Panasonic	DMC-FX5				x
268	Panasonic	DMC-FX50				x
269	Panasonic	DMC-FX7			x	
270	Panasonic	DMC-FX7K			x	
271	Panasonic	DMC-FX8			x	
272	Panasonic	DMC-FX8K			x	
273	Panasonic	DMC-FX8S			x	



Crumpler

# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

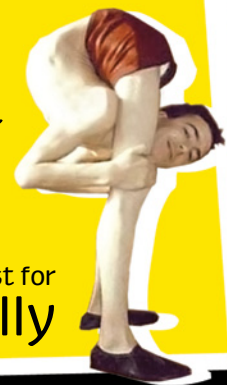

	Brand	Model	45	65	95	110
274	Panasonic	DMC-FX9			x	
275	Panasonic	DMC-FX9K			x	
276	Panasonic	DMC-FX9S			x	
277	Panasonic	DMC-LC70				x
278	Panasonic	DMC-LC80				x
279	Panasonic	DMC-LS1			x	
280	Panasonic	DMC-LS2S				x
281	Panasonic	DMC-LS3				x
282	Panasonic	DMC-LX1K				x
283	Panasonic	DMC-LX1S				x
284	Panasonic	DMC-LX2				x
285	Panasonic	DMC-LZ1				x
286	Panasonic	DMC-LZ2				x
287	Panasonic	DMC-LS60			x	
288	Panasonic	DMC-LS75			x	
289	Panasonic	DMC-LZ6				x
290	Panasonic	DMC-LZ7				x
291	Panasonic	DMC-FX10			x	
292	Panasonic	DMC-FX12			x	
293	Panasonic	DMC-FX30			x	
294	Panasonic	DMC-LX2EB				x
295	Panasonic	DMC-FX30EB			x	
296	Panasonic	DMC-FX12EB			x	
297	Panasonic	DMC-FX10EB			x	
298	Panasonic	DMC-FX33			x	
299	Panasonic	DMC-FX55			x	
300	Panasonic	DMC-FX100				x
301	Pentax	Optio 50			x	
302	Pentax	Optio 50L			x	
303	Pentax	Optio A10		x		
304	Pentax	Optio A20		x		
305	Pentax	Optio E10				x
306	Pentax	Optio E20			x	
307	Pentax	Optio M10			x	
308	Pentax	Optio M20			x	
309	Pentax	Optio S4	x			
310	Pentax	Optio S40			x	
311	Pentax	Optio S45			x	
312	Pentax	Optio S4i	x			



# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**



 
	Brand	Model	45	65	95	110
313	Pentax	Optio S50			x	
314	Pentax	Optio S55			x	
315	Pentax	Optio S5i	x			
316	Pentax	Optio S5n	x			
317	Pentax	Optio S5z	x			
318	Pentax	Optio S6	x			
319	Pentax	Optio S60			x	
320	Pentax	Optio S7	x			
321	Pentax	Optio SV			x	
322	Pentax	Optio SVi			x	
323	Pentax	Optio T10			x	
324	Pentax	Optio T20			x	
325	Pentax	Optio W10				x
326	Pentax	Optio W20				x
327	Pentax	Optio WP				x
328	Pentax	Optio Wpi				x
329	Pentax	Optio E30				x
330	Pentax	Optio M30			x	
331	Pentax	Optio T30			x	
332	Pentax	Optio W30				x
333	Pentax	Optio A30			x	
334	Praktica	DC50			x	
335	Praktica	DC-Z5.8			x	
336	Praktica	DC60			x	
337	Praktica	DC-Z5.5				x
338	Praktica	Luxmedia 5203			x	
339	Praktica	Luxmedia 6203			x	
340	Praktica	Luxmedia 5303				x
341	Praktica	DC-Z7.1			x	
342	Praktica	Luxmedia 6403			x	
343	Praktica	Luxmedia 6503			x	
344	Praktica	Luxmedia 6105			x	
345	Ricoh	Caplio R5			x	
346	Ricoh	GR Digital				x
347	Ricoh	Caplio R4			x	
348	Ricoh	Caplio R40			x	
349	Ricoh	Caplio R3			x	
350	Ricoh	Caplio RR630			x	
351	Ricoh	Caplio RR660			x	



Crumpler

# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

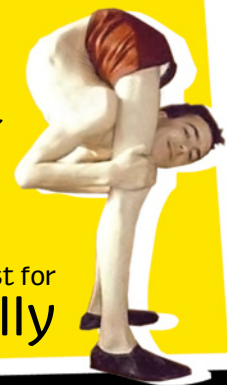

 
	Brand	Model	45	65	95	110
352	Ricoh	Caplio RR730			x	
353	Ricoh	Caplio R30			x	
354	Ricoh	Caplio RR530			x	
355	Ricoh	Caplio R2				x
356	Ricoh	Caplio R1V				x
357	Ricoh	Caplio R6				x
358	Rollei	dp6500			x	
359	Rollei	da10			x	
360	Rollei	db60			x	
361	Rollei	da5324			x	
362	Rollei	dp8300			x	
363	Rollei	dp6200		x		
364	Rollei	da6324			x	
365	Rollei	Prego dp5200	x			
366	Rollei	ds6	x			
367	Rollei	dx63			x	
368	Rollei	dt6 tribute			x	
369	Rollei	da8324			x	
370	Rollei	Prego dp5500			x	
371	Rollei	Prego dp6000				x
372	Rollei	dr5				x
373	Rollei	da6			x	
374	Rollei	da5				x
375	Rollei	da4				x
376	Rollei	da3				x
377	Samsung	Digimax 401				x
378	Samsung	Digimax A40				x
379	Samsung	Digimax A402				x
380	Samsung	Digimax A5				x
381	Samsung	Digimax A50				x
382	Samsung	Digimax A502				x
383	Samsung	Digimax A503				x
384	Samsung	Digimax A55W				x
385	Samsung	Digimax A6				x
386	Samsung	Digimax A7				x
387	Samsung	Digimax i5			x	
388	Samsung	Digimax i50			x	
389	Samsung	Digimax i6			x	
390	Samsung	Digimax L50			x	



Crumpler

# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

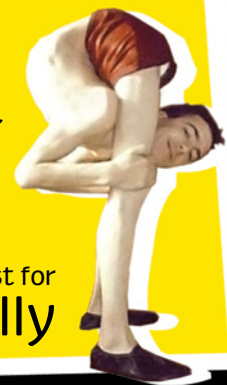

 
	Brand	Model	45	65	95	110
391	Samsung	Digimax L55W				x
392	Samsung	Digimax L60				x
393	Samsung	Digimax L70			x	
394	Samsung	Digimax L85				x
395	Samsung	Digimax S500				x
396	Samsung	Digimax S600				x
397	Samsung	Digimax S800				x
398	Samsung	Digimax U-CA 505				x
399	Samsung	Digimax U-CA4				x
400	Samsung	Digimax U-CA5				x
401	Samsung	Digimax V700				x
402	Samsung	Digimax V800				x
403	Samsung	NV10				x
404	Samsung	NV3			x	
405	Samsung	NV7 OPS				x
406	Samsung	S1000				x
407	Samsung	S700				x
408	Samsung	Digimax L80				x
409	Samsung	Digimax L700			x	
410	Samsung	Digimax L73				x
411	Samsung	Digimax S630				x
412	Samsung	Digimax S730				x
413	Samsung	Digimax S850				x
414	Samsung	Digimax S1050				x
415	Samsung	Digimax i70			x	
416	Samsung	Digimax L77			x	
417	Samsung	Digimax L74 wide				x
418	Samsung	Digimax S830				x
419	Samsung	Digimax S1030				x
420	Samsung	Digimax D103				x
421	Samsung	Digimax i7				x
422	Samsung	VP-MS12S			x	
423	Samsung	NV8				x
424	Samsung	NV11				x
425	Samsung	NV15				x
426	Samsung	NV20				x
427	Samsung	i70			x	
428	Samsung	i85			x	
429	Samsung	L83T			x	



Crumpler

# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

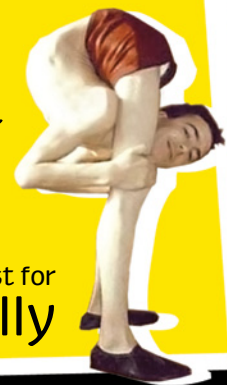 


	Brand	Model	45	65	95	110
430	Samsung	L730			x	
431	Samsung	L830			x	
432	Samsung	S85				x
433	Samsung	D85				x
434	Sanyo	Xacti E60				x
435	Sanyo	Xacti S60			x	
436	Sanyo	Xacti VPC-E6				x
437	Sanyo	Xacti VPC-E7			x	
438	Sanyo	Xacti VPC-J4				x
439	Sanyo	Xacti VPC-S4			x	
440	Sanyo	Xacti VPC-S5			x	
441	Sanyo	Xacti VPC-S6			x	
442	Sanyo	Xacti VPC-S7			x	
443	Sanyo	VPC-A5			x	
444	Sanyo	VPC-S60			x	
445	Sony	DSC-S40				x
446	Sony	DSC-L1			x	
447	Sony	DSC-N1				x
448	Sony	DSC-N2				x
449	Sony	DSC-P10				x
450	Sony	DSC-P100				x
451	Sony	DSC-P12				x
452	Sony	DSC-P120				x
453	Sony	DSC-P150				x
454	Sony	DSC-P200				x
455	Sony	DSC-P200R				x
456	Sony	DSC-P32				x
457	Sony	DSC-P41				x
458	Sony	DSC-P43				x
459	Sony	DSC-P8				x
460	Sony	DSC-S500			x	
461	Sony	DSC-T1			x	
462	Sony	DSC-T10			x	
463	Sony	DSC-T11				x
464	Sony	DSC-T3			x	
465	Sony	DSC-T33				x
466	Sony	DSC-T5			x	
467	Sony	DSC-T50			x	
468	Sony	DSC-T5B			x	



# Size Matters

Digital Camera Fitting List for  
**Lolly Dolly**

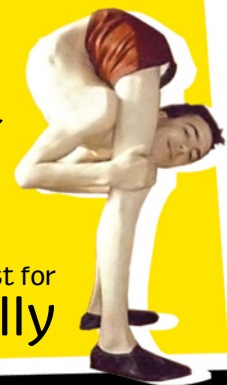

	Brand	Model	45	65	95	110
469	Sony	DSC-T7			x	
470	Sony	DSC-T9			x	
471	Sony	DSC-U20	x			
472	Sony	DSC-U30	x			
473	Sony	DSC-U40	x			
474	Sony	DSC-U50				x
475	Sony	DSC-W1			x	
476	Sony	DSC-W100			x	
477	Sony	DSC-W12			x	
478	Sony	DSC-W30			x	
479	Sony	DSC-W5			x	
480	Sony	DSC-W50		x		
481	Sony	DSC-W70		x		
482	Sony	DSC-S650			x	
483	Sony	DSC-S700			x	
484	Sony	DSC-W35			x	
485	Sony	DSC-W55			x	
486	Sony	DSC-W80			x	
487	Sony	DSC-W90			x	
488	Sony	DSC-W200			x	
489	Sony	DSC-T100			x	
490	Sony	DSC-T20			x	